


Albero in uscita - Output shafts

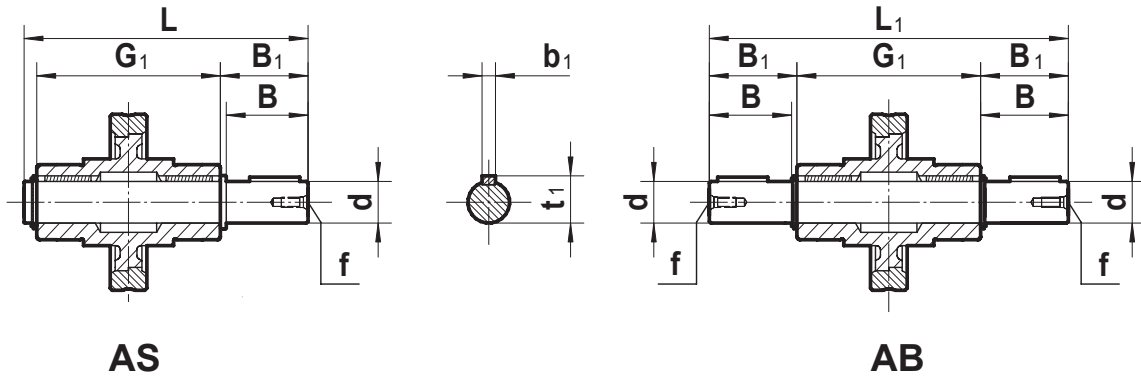


	d	B	B1	G1	L	L1	f	b1	t1
025	11 g6 9 *	23 25 *	25.5 30 *	50	81 85.5 *	101	—	4 3 *	12.5 10.2 *
030	14 h6	30	32.5	63	102	128	M6	5	16
040	18 h6	40	43	78	128	164	M6	6	20.5
050	25 h6	50	53.5	92	153	199	M10	8	28
063	25 h6	50	53.5	112	173	219	M10	8	28
075	28 h6	60	63.5	120	192	247	M10	8	31
090	35 h6	80	84.5	140	234	309	M12	10	38
110	42 h6	80	84.5	155	249	324	M16	12	45
130	45 h6	80	85	170	265	340	M16	14	48.5

(*) Modello non standard

(*) Nonstandard model

Carcassa - Cover

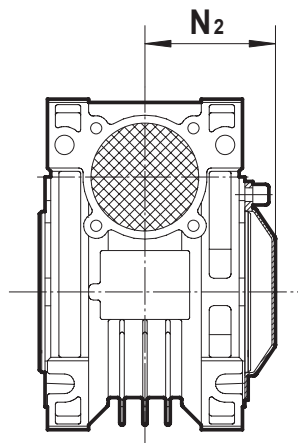

	N ₂
030	47
040	55
050	62.5
063	73.5
075	78.5
090	90.5
110	99
130	107